

Ceiling Pot Rack Installation and Care Instructions


PRC-24

Included in the pack is:


- 1 Ceiling pot rack with brushed chrome utensil holders
- 1 Chrome grid
- 4 Ceiling eye screws
- 6 Cast pot hooks
- 4 4" Utensil hooks
- 4 8" Extension hooks
- Instruction sheet

Installation of your J. K. Adams pot rack should not be difficult. Two people will make hanging the rack go smoothly.

The screw eyes *must* be securely installed into solid wood. Sheet-rock fasteners will not hold enough weight and should not be used.

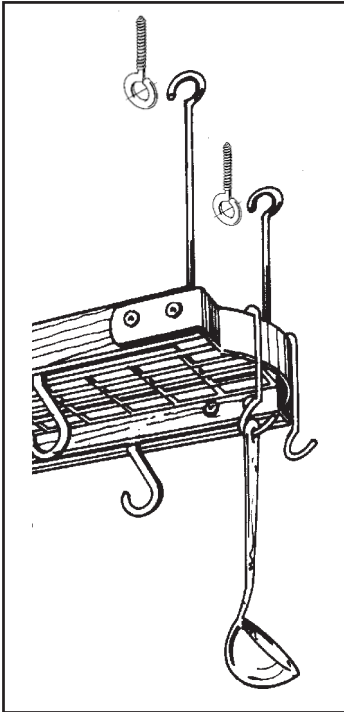

1. Find the wooden members in your ceiling. Usually they are 16" apart.
2. The hangers on the rack create a rectangle 16" x 11 1/4". Transfer the measurement to the ceiling, confirming you will be drilling into solid wood.
3. Drill four 3/16" (pilot) holes.
4. Twist the eye screws into the pilot holes until all the threads have disappeared.
5. Hang the 8" extension hooks from the eye screws. Remove the grid from the pot rack and set aside.
6. Lift the rack up to the extension hooks and attach them to the center pins which run between the rails in each corner.
7. Replace the grid from the top.
8. Drop the cast pot hooks between the wooden rails. Pot hooks can be turned so pans nest together or so pan bottoms face outwards, as you prefer.

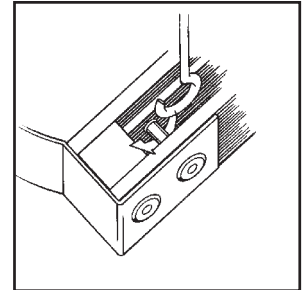

NOTE: If the rack isn't level, unhook the extension hook from the incorrect corner. Adjust the ceiling screw by turning it 1/2 turn in the appropriate direction. Reinsert the extension hook.

Care Instructions: Wipe the parts with a damp cloth and dry thoroughly.



J.K. Adams Co.
DORSET, VERMONT

(800) 451-6118

www.jkadams.com